



Popcorn Machine Instructions

How to operate machine?

The popcorn machine features three operating control buttons. You will find three switches at the top front of the popcorn machine.

- 1) The first button is that **heat switch**.
 - **The most important thing to remember is to turn that heat switch off when popcorn is nearly complete popping.
 - This keep your popcorn from burning and internal parts from burning out. Don't worry you will have enough heat to complete your popping kettle heats up to 400°
- 2) The Second button is the **motor button** this button activates the motor that keeps the popcorn, oil, and salt in constant motion in the kettle so your popcorn does not burn
 - Activate your motor button after activating the heat switch.
- 3) The third button controls the heat lamp. The heat lamp bulb in the upper right corner in the popcorn machine this keeps the popcorn warm and fresh.

Making your popcorn!

1st make sure to turn on all three switches.

2nd After putting in the butter wait about 30 seconds for butter to melt and then you can add the popcorn into the kettle.

*After you activate the first 2 switches you never want to have an empty kettle more than 15 - 20 seconds. You will quickly burnout internal parts in the popcorn kettle.

3rd When the popcorn is finished popping inside do not turn off the motor, only the heat button. If you're not planning to make another batch of popcorn you dump the popcorn out using the popcorn kettle handle and after all popcorn is out you turn off the motor, only leaving the (LIGHT SWITCH) inside on.